CSSR-108BK, Floor Stand Spinner Snack Rack **Assembly Instructions**


Step 1: Attached the two feet to the bottom of the base pole, with the provided two long screws and bolts. This will create the base for the Spinner Snack Rack. (There are two pre-drilled holes in the base pole and a support clip).





Feet Attached to Base Pole

Step 2: Joining together the three labeled racks marked, Top, Middle and Bottom. (see next page).

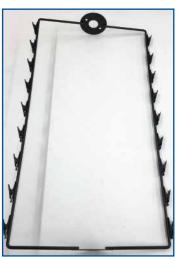





Middle



Bottom



Step 2 Continued: Join together Top Rack and Middle Rack, (see photo A). Then join Bottom Rack into Top and Middle Rack, (see photo B). Then lock rack sections together with the provided screws and wing nuts, (wing nuts facing up).








Screw & Wing Nut



IMPORTANT: Please be sure the snack clips are facing down when joining together the Top, Middle and Bottom rack sections.

Step 3: Next insert one of the pole sections into base pole, (base pole should now have the legs attached to it). Then slide the first assembled Rack AND the pole locking connector onto the pole, and secure, (see photo C).

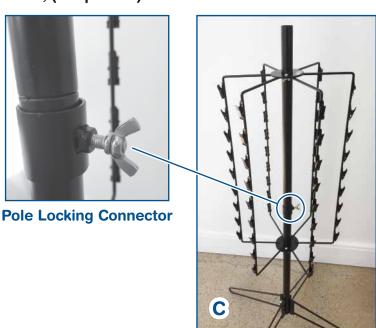



Step 4: Repeat step 2 to assembly the second section of racks. Next insert the remaining pole section. Then add the second section of racks AND the pole locking connector to the Floor Stand Spinner Snack Rack, (see photo D).



Step 5: Slide onto the top of the pole the Sign Holder, and screw into place, (see photo E).

